


Sling Chair Patterns

Enlarge 250%

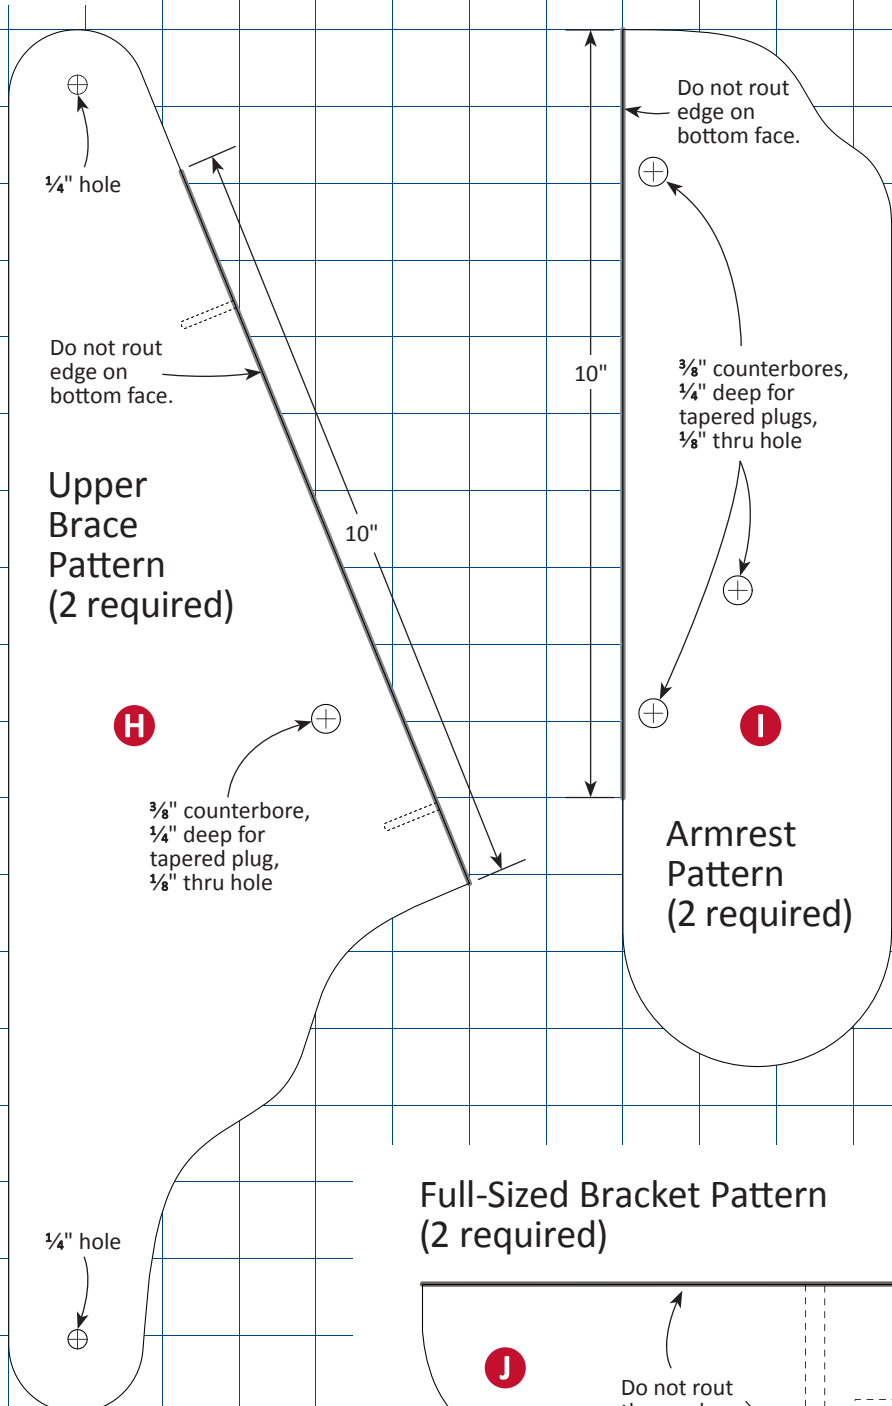

Note: Rout edges with 1/4" dia. round-over bit except those marked with bold stroke.

1 square = 1 inch